



Serial #: _____

SANITATION



ANSI/NSF 4
29AV



Instruction Manual for the *Chefmate*® Warming Lamp Model WL2

For all after sales support, visit www.globefoodequip.com

- Complete the Warranty Registration
- Find an Authorized Servicer
- View Parts Catalogs

For additional Technical Support call Globe at 1-866-260-0522.

- IMPORTANT SAFETY NOTICE -

This manual contains important safety instructions which must be strictly followed when using this equipment.

Maintain and use this manual as a reference for training.

Index

ATTENTION OWNERS AND OPERATORS.....	4
SAFEGUARDS & SAFETY INSTRUCTIONS	5
ASSEMBLY & INSTALLATION	6
OPERATING INSTRUCTIONS.....	6
STORAGE INSTRUCTIONS	6
CLEANING	6
MAINTENANCE	7
TROUBLESHOOTING	8



GLOBE FOOD EQUIPMENT COMPANY
2153 DRYDEN RD.
DAYTON, OH 45439
PHONE: 937-299-5493
TOLL FREE: 800-347-5423
E-MAIL: info@globefoodequip.com
WEBSITE: www.globefoodequip.com

Attention Owners and Operators

Globe's equipment is designed to provide safe and productive processing, cooking and warming of food products as long as the equipment is used in accordance with the instructions in this manual and is properly maintained. Unless the operator is adequately trained and supervised there is a possibility of serious injury. Owners of this equipment bear the responsibility to make certain that this equipment is used properly and safely, and to strictly follow all of the instructions contained in this manual and the requirements of local, state or federal law.

Owners should not permit anyone to touch this equipment unless they are over 18 years of age, are adequately trained and supervised, and have read and understood this manual. Owners should also ensure that no customers, visitors or other unauthorized personnel come in contact with this equipment. Please remember that Globe cannot anticipate every circumstance or environment in which its equipment will be operated. It is the responsibility of the owner and the operator to remain alert to any hazards posed by the function of this equipment. If you are ever uncertain about a particular task or the proper method of operating this equipment, ask your supervisor.

This manual contains a number of precautions to follow to help promote safe use of this equipment. Throughout the manual you will see additional warnings to help alert you to potential hazards.

Warnings affecting your personal safety are indicated by:
Avertissements touchant votre sécurité personnelle sont indiqués par:



or



Warnings related to possible damage to the equipment are indicated by:
Les avertissements liés à d'éventuels dommages à l'équipement sont indiqués par:



If any warning labels and/or this manual are misplaced, damaged, illegible or if you require additional copies, please contact your nearest representative or Globe directly for these items at no charge.

Please remember that neither this manual or the warning labels replace the need to be alert, to properly train and supervise operators, and to use common sense when using this equipment.

Safeguards & Safety Instructions



WARNING This equipment gets extremely HOT and can cause serious harm to operators if proper cautionary procedures are not followed.

To ensure proper and safe operation, the general safety tips below must be followed.

- **DO NOT** disassemble food warming lamp.
- **ONLY** trained and qualified service personnel should attempt repairs.
- **DO NOT** stack any items, paper or cloth on or near warming lamp.
- **DO NOT** leave warming lamp on during non-business hours.
- **DO NOT** use this warming lamp outdoors.
- **NEVER** use this warming lamp to heat anything other than food.
- **NEVER** immerse warming lamp in water or put into a dishmachine.
- **NEVER** place a plastic tray/plate/container under warming lamp.
- **ALWAYS** use a cooking glove or hot pad when reaching under warming lamp.
- **DO NOT** leave serving utensils under the warming lamp.
- **DO NOT** touch warming lamp while in use or directly after use.



AVERTISSEMENT Cet équipement devient extrêmement chaud et peut causer un grave préjudice aux opérateurs si bon avertissement procédures ne sont pas

Pour assurer le bon fonctionnement et de la sécurité, de la sécurité générale conseils ci-dessous doivent être suivies.

- **NE PAS** désassembler le réchauffement alimentaire lampe.
- **SEUL LE** personnel spécialisé et qualifié devrait essayer les réparations.
- **N'EMPILEZ PAS** les éléments, du papier ou du tissu sur ou à proximité de lampe réchauffement
- **NE LAISSEZ PAS** le réchauffement lampe en dehors des heures d'ouverture.
- **N'UTILISEZ PAS** ce réchauffement lampe à l'extérieur.
- **NE JAMAIS** utiliser ce réchauffement lampe pour chauffer quoi que ce soit d'autre que de la nourriture.
- **NE JAMAIS** immerger le réchauffement lampe dans l'eau ou mis dans un dishmachine.
- **NE JAMAIS** placer un bac en plastique/plaque/récipient sous lampe réchauffement.
- **TOUJOURS UTILISER** un gant de cuisine ou hot pad lorsqu'il atteint le réchauffement sous lampe.
- **NE LAISSEZ PAS** ustensiles servant sous le réchauffement lampe.
- **NE TOUCHEZ PAS** le réchauffement lampe pendant l'utilisation ou directement après utilisation.

Unpacking & Installation

UNPACKING

Unpack the warming lamp immediately after receipt. If the machine is found to be damaged, immediately contact us at help@globefoodequip.com or call 1-800-347-5423 ext. 256. Please include your name, serial #, item that is damaged, explanation of the damage and photographs if possible. The damage must be reported to Globe within 7 days from the time of shipment. Refer to Globe's Freight Damage policy for more information. <https://globefoodequip.com/support/order-return-policy.html>

1. Remove all components of warming lamp for quick assembly.
2. Place warming lamp base on a flat surface; add the extension bar to the top of the base; align the extension bar holes towards the back for easy adjusting later.
3. Next, place the domed lights onto the beveled part of the extension pole.
NOTE: Domed lights face the same direction as the base feet.
4. Use bolts provided to secure warming lamp/lamp height in the back of the extension pole.
5. Remove light bulbs from packaging and carefully screw a light bulb into each socket.
6. Place warming lamp on a level surface away from water and at least 8" away from wall or other objects.
7. With the power On/Off switch in the "Off" position, plug in warming lamp.

Operating Instructions

1. Make sure warming lamp is not placed under countertop or overhead cabinet while in use as this can result in a fire.
2. Make sure nothing is on or touching warming lamp and all packing materials have been removed and discarded.
3. Turn the unit on by pressing the On/Off switch "On". Warming lamp will illuminate heating bulbs.

Storage Instructions

NOTE: Warming lamp will NOT cook food. It is intended to keep already cooked food warm for serving.

- **NEVER** move the warming lamp while in use.
- **DO NOT** store warming lamp in a cabinet while warming lamp is plugged in.

Store warming lamp on countertop or in a designated area away from water.

Cleaning

CAUTION

- **NEVER** place warming lamp in sink or dishwasher.
- **DO NOT** hose down or pressure wash any part of warming lamp.
- **NEVER** wipe warming lamp or its bulbs while plugged in and/or turned on.

ATTENTION

- **NE** placez jamais le réchauffement lampe dans le lavabo ou lave-vaisselle.
 - **NE PAS** le flexible vers le bas ou laver sous pression toute partie de réchauffement lampe.
 - **ESSUYEZ** jamais réchauffement lampe ou ses ampoules tandis que branché et/ou activé.
1. If warming lamp is on: power off warming lamp and let cool for at least 15 minutes. Unplug warming lamp from the outlet and gently wipe down warming lamp stand and bulb holders with a clean, dry or slightly damp soft cloth.
 2. Let unit dry completely before resuming normal use.

Maintenance



WARNING

NEVER attempt to replace heating bulb while the unit is **ON**.



AVERTISSEMENT

NE JAMAIS essayer de remplacer l'ampoule chauffage pendant que l'unité est sous tension.

1. To replace a warming lamp bulb, power off the warming lamp and let cool for at least 15 minutes.
2. Unplug the lamp from the outlet.



WARNING

Make sure the lamp heads are cool to the touch before approaching the bulb.



AVERTISSEMENT

Assurez-vous que la lampe chefs sont froides au toucher avant d'approcher l'ampoule.

3. Gently unscrew the defective bulb from its socket and replace with the correct watt/authorized bulb.



WARNING

DO NOT attempt to use a regulator or unauthorized bulb/part to replace the defective bulb. Failure to comply with this warning may result in electrical shock or fire.



AVERTISSEMENT

N'essayez pas d'utiliser un régulateur non autorisés ou ampoule/partie de remplacer l'ampoule défectueuse. Le non-respect de cet avertissement peut provoquer un choc électrique ou un incendie.

4. Resume normal use.

Troubleshooting

DO NOT attempt any self repairs on this unit. Please contact your local authorized servicer for any repairs.