
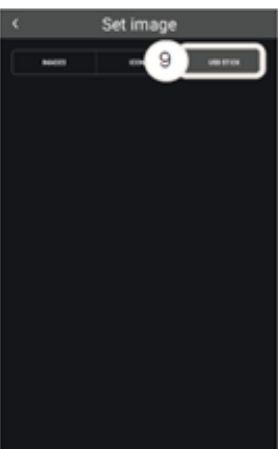


1. Touch "Settings", "Startup permission"
2. Verify Superuser mode is checked.
3. Touch "OK"
  - Insert USB into a computer.
  - Create a folder named Invoq on the USB storage.
  - Create a folder named Recipes inside of the Invoq folder. You can only upload files from a USB stick if the files are stored in a folder named "Recipes".
4. To download recipes from email to USB folder:
  - Drag the recipe folder as a .zip file into the Recipes folder. Keep all recipes in .zip format.
5. To import recipes from USB to Invoq:
  - Insert the USB into port on the right-hand side of the oven under the probe.
  - Touch "Recipes" on home screen
  - Touch USB icon, touch "Import Recipes"
  - Touch the .zip file of recipes and/or QSR headlines you want to import.
  - If you want to overwrite (replace) existing recipes, groups, or MenuPlanner check those boxes. Do not check if you'd like to keep them.
  - Touch "Import" and "Yes" to confirm selection.
6. To export recipes from Invoq to USB:
  - Insert the USB into port on the right-hand side of the oven under the probe.
  - Touch "Recipes" on home screen
  - Touch USB icon, touch "Export Recipes"
  - Select the recipes and/or QSR headlines you want to export.
  - Touch right arrow icon
  - Enter the recipe file name.
  - Touch done icon (check mark)
  - Touch "Finish".

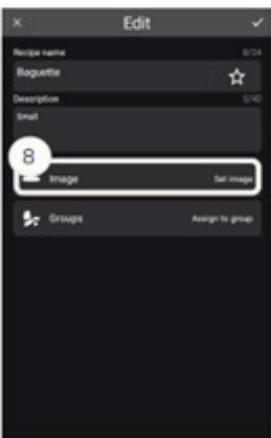

1. Touch "Settings", "Startup permission"
2. Verify Superuser mode is checked.
3. Touch "OK"
  - Insert USB into a computer where you have recipe photos stored. Ensure photos are in Jpeg format.
  - Create a folder named Invoq on the USB storage.
  - Create a folder named CustomImages inside of the Invoq folder.
  - Drag or upload the Jpeg recipe images into the CustomImages folder.
  - Extract the USB Key.
4. Insert USB into port on the right-hand side of the oven under the probe.
5. Touch "Recipes" in the home screen menu.
6. Touch the recipe to which you want to add the image.
7. Touch the edit icon. Touch the more icon. Touch "Recipe details".
8. Touch "Set image".
9. Touch "USBstick" and select the relevant images
10. Save changes on recipe.